

TRUCOZIE

Cordless Vacuum Cleaner User Manual & Operating Instructions

Downloaded from <https://thetrucozie.com/>

Table of Contents

1. Safety Instructions	2
2. Package Contents	3
3. Product Overview	3
4. Technical Specifications	4
5. Assembly Instructions	4
6. Operating Instructions	5
7. Maintenance & Cleaning	6
8. Troubleshooting	7
9. Warranty Information	8
10. Contact Information	8

1. Safety Instructions

IMPORTANT SAFETY WARNINGS

Please read all instructions before operating this device. Failure to follow these instructions may result in personal injury or property damage.

General Safety

- Only use the vacuum cleaner for its intended purpose as described in this manual
- Do not use the vacuum if the power cord or plug is damaged
- Never use the vacuum cleaner without the dust container and filters properly installed
- Do not vacuum hot coals, cigarette butts, matches, or any burning or smoking objects
- Do not vacuum flammable or combustible liquids such as gasoline, or use in areas where they may be present
- Do not vacuum toxic materials (chlorine bleach, ammonia, drain cleaner, etc.)
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts

Electrical Safety

- Use only the provided charger to charge the battery
- Do not use outdoors or on wet surfaces
- Do not handle the charger or vacuum with wet hands
- Unplug the charger when not in use
- Do not use an extension cord with the charger
- Do not pull or carry by the cord or use the cord as a handle

Battery Safety

- Charge only with the supplied charger
- Do not disassemble, modify, or attempt to repair the battery pack
- Do not expose to extreme temperatures (below 0°C or above 40°C)
- If battery leaks, avoid contact with skin and eyes
- Store in a cool, dry place when not in use

2. Package Contents

Your Trucozie Cordless Vacuum package should include:

- 1x Main vacuum unit with battery
- 1x Extension tube
- 1x Floor brush attachment
- 1x Crevice tool
- 1x Dusting brush
- 1x Upholstery tool
- 1x Wall mounting bracket
- 1x Charging adapter
- 1x User manual
- Mounting screws and anchors

Note: If any items are missing or damaged, please contact customer service immediately. Do not use the vacuum if any parts are missing.

3. Product Overview

Main Unit Components

- **Motor Housing:** Contains the powerful digital motor
- **Dust Container:** Removable transparent container for debris collection
- **Filtration System:** Multi-stage HEPA filtration
- **Battery Pack:** Rechargeable lithium-ion battery
- **Power Button:** LED indicator shows power levels
- **Trigger:** Variable speed control
- **Release Button:** For detaching handheld unit

Attachments

- **Extension Tube:** Adjustable length for floor cleaning
- **Floor Brush:** Motorized brush roll for carpets and hard floors
- **Crevice Tool:** For tight spaces and corners
- **Dusting Brush:** Soft bristles for delicate surfaces
- **Upholstery Tool:** For furniture and fabric surfaces

4. Technical Specifications

Specification	Details
Motor Type	Digital Brushless Motor
Suction Power	22,000 Pa (Max Mode)
Battery Type	Lithium-ion 22.2V
Runtime	Up to 45 minutes (Eco Mode) Up to 25 minutes (Standard Mode) Up to 12 minutes (Max Mode)
Charging Time	4-5 hours (full charge)
Dust Container Capacity	0.6 L
Weight	2.8 kg (main unit)
Noise Level	≤72 dB
Filtration	5-Stage HEPA Filtration
Operating Temperature	5°C to 35°C

5. Assembly Instructions

Initial Setup

Before First Use: Charge the battery for at least 4 hours before initial operation.

1 Install the Wall Mount (Optional)

- Choose a suitable location near an electrical outlet
- Mark screw holes using the bracket as a template
- Drill holes and insert wall anchors if needed
- Secure bracket with provided screws

2 Attach Extension Tube

- Align the extension tube with the main unit connector
- Push firmly until you hear a click
- Adjust tube length by pressing the release button and extending

3 Attach Floor Brush

- Connect the floor brush to the extension tube
- Ensure the electrical connection is properly seated
- The brush will automatically start when the vacuum is turned on

6. Operating Instructions

Charging the Battery

- Connect the charging adapter to the charging port on the main unit

- Plug the adapter into a standard electrical outlet
- LED indicators will show charging progress:
 - Red light: Charging in progress
 - Blue light: Fully charged
 - Flashing red: Low battery
- Unplug when fully charged

Power Modes

The Trucozie vacuum features three power modes:

- **Eco Mode (1 LED):** Quiet operation, extended runtime, suitable for light cleaning
- **Standard Mode (2 LEDs):** Balanced power and runtime for general cleaning
- **Max Mode (3 LEDs):** Maximum suction power for deep cleaning and stubborn debris

Operating the Vacuum

1 Power On

- Press and hold the power button for 2 seconds
- The vacuum will start in Eco mode by default

2 Select Power Mode

- Press the power button repeatedly to cycle through modes
- LED indicators will show the current mode

3 Start Cleaning

- Pull the trigger to activate suction
- Release the trigger to pause
- Use smooth, overlapping strokes for best results

Using as Handheld

- Press the release button on the main unit
- Lift the handheld section away from the extension tube
- Attach desired tool directly to the handheld unit
- Operate normally with trigger control

7. Maintenance & Cleaning

MAINTENANCE SAFETY

Always turn off and unplug the charger before performing any maintenance. Allow the unit to cool down for at least 30 minutes after use.

Emptying the Dust Container

- 1 Remove the dust container by pressing the release button
- 2 Hold the container over a trash bin
- 3 Press the bottom release to open and empty contents
- 4 Close the bottom door and reattach to main unit

Tip: Empty the dust container when it reaches the MAX line or after each cleaning session for optimal performance.

Cleaning the Filters

1 Pre-Filter (Weekly)

- Remove the dust container
- Remove the pre-filter from the container
- Rinse with cold water and shake dry
- Allow to air dry completely (24 hours) before reinstalling

2 HEPA Filter (Monthly)

- Remove the main filter assembly from the motor housing
- Gently tap to remove loose debris
- Rinse with cold water if heavily soiled
- Allow to air dry completely (24 hours) before reinstalling

Cleaning the Floor Brush

- Remove the floor brush from the extension tube
- Use scissors to cut away hair and threads wrapped around the brush roll
- Wipe the housing with a damp cloth
- Ensure the brush spins freely before reattaching

Battery Care

- Recharge after each use or when LED indicators show low battery
- Store in a cool, dry place
- If storing for extended periods, charge every 3 months
- Battery performance may decrease over time - this is normal

Maintenance Schedule

- **After Each Use:** Empty dust container, check for blockages
- **Weekly:** Clean pre-filter, wipe exterior
- **Monthly:** Clean HEPA filter, deep clean all attachments
- **As Needed:** Clean brush roll, check for wear and damage

8. Troubleshooting

Vacuum Won't Turn On

- Check battery charge level
- Ensure battery is properly connected
- Check for blockages in the airflow path
- Verify dust container is properly installed

Reduced Suction Power

- Empty the dust container
- Clean or replace filters
- Check for blockages in tube or attachments
- Ensure all connections are secure
- Clean the brush roll if using floor attachment

Battery Issues

- **Short Runtime:** Battery may need replacement after 2-3 years of use
- **Won't Charge:** Check charger connection, try different outlet
- **Overheating:** Allow to cool, avoid charging in high temperatures

Brush Roll Problems

- **Not Spinning:** Check for hair/debris wrap, ensure proper connection
- **Making Noise:** Remove debris, check for damage
- **Poor Performance:** Clean brush bristles, replace if worn

When to Contact Service

Contact customer service if you experience:

- Unusual noises or vibrations
- Electrical problems or sparking
- Cracked housing or damaged components
- Problems not resolved by troubleshooting steps

9. Warranty Information

Limited Warranty Coverage

Trucozie provides a limited warranty covering defects in materials and workmanship:

- **Main Unit & Motor:** 2 years from date of purchase
- **Battery:** 1 year from date of purchase
- **Accessories:** 90 days from date of purchase

Warranty Exclusions

This warranty does not cover:

- Normal wear and tear
- Damage from misuse, abuse, or accidents
- Damage from improper maintenance
- Use with unauthorized accessories
- Commercial or rental use

Warranty Service

To obtain warranty service:

- Contact customer service with proof of purchase
- Describe the problem in detail
- Follow instructions for return or repair
- Keep your original receipt as proof of purchase

10. Contact Information

Customer Service

For technical support, warranty claims, or general inquiries:

- **Website:** <https://thetrucozie.com/>
- **Email:** support@thetrucozie.com
- **Phone:** 1-800-TRUCOZIE (1-800-878-2694)
- **Hours:** Monday-Friday, 9:00 AM - 6:00 PM EST

Replacement Parts & Accessories

Genuine Trucozie parts and accessories are available through:

- Official website: <https://thetrucozie.com/>
- Authorized retailers
- Customer service phone line

Important: Use only genuine Trucozie parts and accessories to maintain warranty coverage and ensure optimal performance.